

Purpose

Technique PRTDAYS sets for which days in a run the tabulation from Operation LIST-MSP is printed.

Valid values are 0 through 3.

The Global default is 0.

This Technique is Universal.

Form of Input

PRTDAYS(integer)

where integer is 0, 1, 2 or 3 indicating:

0 = tabulate all days

1 = tabulate all observed days

2 = tabulate just the current day

3 = tabulate the current day and all future days

Examples

PRTDAYS(3)

This causes the current day and all future days to be tabulated.

PRTDAYS

This causes all observed days to be tabulated.